# CM-13 13-Inch Carpet Machine Parts Lists and Schematic Drawings

#### Index

Handle	Page 2
Lower Push Bar	Page 3
Tank Cover and Fresh Water Tank	Page 4
Tank and Chassis Cover	Page 5
Chassis	Page 6
Pump Assembly and Hoses	Page 6
Suction Motor and Hoses	Page 7
Brush Housing and Nozzles	Page 8
Brush Motor and Brush Support	Page 9
Wiring Diagram	Page 10




#### **Machine Diagram**






## CM-13 13-Inch Carpet Machine Handle Parts List and Schematic Drawing

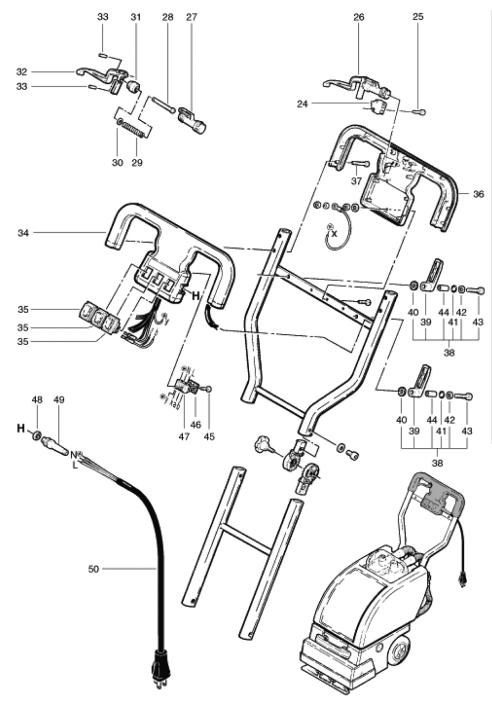

Pos.	Description	Reference
24	Switch	P242
25	PT screw KA 30x20 mm	P482 P
26	Lever complete including Items 27-33	400.620
27	Valve body	400.622
28	Valve pin	P681 D
29	Valve spring	P681 E
30	Washer M 5	P497 G
31	Cap nut	P681 B
32	Lever	400.621
33	Cyl. Pin Ø 1,5x14,5 mm	P681 K
34	Upper handle housing	400.611
35	Tumbler switch	P240
36	Lower handle housing	420.618
37	PT screw KA 30x30 mm	P516B
38	Catch for cable complete including Items 39-44	P087
39	Catch for cable	P087 A
40	Washer Ø 6/16x1 mm	P497 M
41	O-Ring 8,73x1,78 mm	P088
42	Washer M 6	P496 K
43	Hexagon socket screw M 6x30 mm	P488 S
44	Distance piece Ø 6/8x18,8 mm	P087 B
45	PT screw 3x20 mm	P516 E
46	Marking plate	P394
47	Terminal 3 poles	P383 A
48	Counter nut PG 9	P279 H
49	Cable attachment	P279 D
50	Harness USA	P275 A




### CM-13 13-Inch Carpet Machine Lower Push Bar Parts List and Schematic Drawing

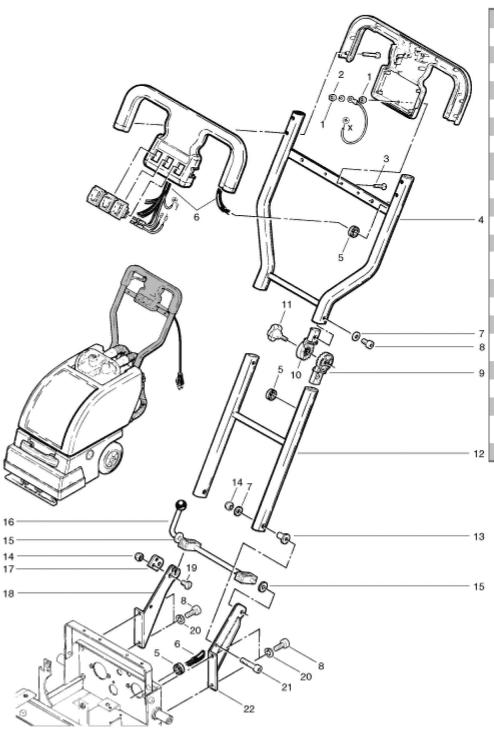

Pos.         Description         Reference           01         Hexagon nut M 4         P491 Q           Spring ring M 4         P498 A           03         Screw M 4x20         P481 E           Upper pushbar         420.650           05         Rubber clamp         P207 A           Wiring to handle         420.305 A           07         Washer M 6         P496 L           Hexagon socket screw M 6x12         P486 Q           09         Lower joint         420.602           Upper joint         420.601           11         Screw knob         P253           Lower pushbar         420.651           13         Distance piece Ø 22/6,3x22,5         420.370           Stop-nut M 6         P493 K           15         Washer M 8         P496 Q           Adjustment lever         420.356           17         Metal supporting piece         420.999           Lever support (right)         420.351 A           19         Screw M 6x12         P487 U           Spring ring M 6         P486 S           Lever support (left)         420.351			
Spring ring M 4         P498 A           03         Screw M 4x20         P481 E           Upper pushbar         420.650           05         Rubber clamp         P207 A           Wiring to handle         420.305 A           07         Washer M 6         P496 L           Hexagon socket screw M 6x12         P486 Q           09         Lower joint         420.602           Upper joint         420.601           11         Screw knob         P253           Lower pushbar         420.651           13         Distance piece Ø 22/6,3x22,5         420.370           Stop-nut M 6         P493 K           15         Washer M 8         P496 Q           Adjustment lever         420.999           Lever support (right)         420.999           Lever support (right)         420.351 A           19         Screw M 6x12         P487 U           Spring ring M 6         P498 U           Hexagon screw M 6x35         P486 S	Pos.	Description	Reference
03         Screw M 4x20         P481 E           Upper pushbar         420.650           05         Rubber clamp         P207 A           Wiring to handle         420.305 A           07         Washer M 6         P496 L           Hexagon socket screw M 6x12         P486 Q           09         Lower joint         420.602           Upper joint         420.601           11         Screw knob         P253           Lower pushbar         420.651           13         Distance piece Ø 22/6,3x22,5         420.370           Stop-nut M 6         P493 K           15         Washer M 8         P496 Q           Adjustment lever         420.999           Lever support (right)         420.351 A           19         Screw M 6x12         P487 U           Spring ring M 6         P498 U           21         Hexagon screw M 6x35         P486 S	01	Hexagon nut M 4	P491 Q
Upper pushbar         420.650           05         Rubber clamp         P207 A           Wiring to handle         420.305 A           07         Washer M 6         P496 L           Hexagon socket screw M 6x12         P486 Q           09         Lower joint         420.602           Upper joint         420.601           11         Screw knob         P253           Lower pushbar         420.651           13         Distance piece Ø 22/6,3x22,5         420.370           Stop-nut M 6         P493 K           15         Washer M 8         P496 Q           Adjustment lever         420.356           17         Metal supporting piece         420.999           Lever support (right)         420.351 A           19         Screw M 6x12         P487 U           Spring ring M 6         P498 U           21         Hexagon screw M 6x35         P486 S		Spring ring M 4	P498 A
05         Rubber clamp         P207 A           Wiring to handle         420.305 A           07         Washer M 6         P496 L           Hexagon socket screw M 6x12         P486 Q           09         Lower joint         420.602           Upper joint         420.601           11         Screw knob         P253           Lower pushbar         420.651           13         Distance piece Ø 22/6,3x22,5         420.370           Stop-nut M 6         P493 K           15         Washer M 8         P496 Q           Adjustment lever         420.356           17         Metal supporting piece         420.999           Lever support (right)         420.351 A           19         Screw M 6x12         P487 U           Spring ring M 6         P498 U           21         Hexagon screw M 6x35         P486 S	03	Screw M 4x20	P481 E
Wiring to handle         420.305 A           07         Washer M 6         P496 L           Hexagon socket screw M 6x12         P486 Q           09         Lower joint         420.602           Upper joint         420.601           11         Screw knob         P253           Lower pushbar         420.651           13         Distance piece Ø 22/6,3x22,5         420.370           Stop-nut M 6         P493 K           15         Washer M 8         P496 Q           Adjustment lever         420.356           17         Metal supporting piece         420.999           Lever support (right)         420.351 A           19         Screw M 6x12         P487 U           Spring ring M 6         P498 U           12         Hexagon screw M 6x35         P486 S		Upper pushbar	420.650
07       Washer M 6 Hexagon socket screw M 6x12       P496 L         09       Lower joint       420.602         Upper joint       420.601         11       Screw knob       P253         Lower pushbar       420.651         13       Distance piece Ø 22/6,3x22,5       420.370         Stop-nut M 6       P493 K         15       Washer M 8       P496 Q         Adjustment lever       420.356         17       Metal supporting piece       420.999         Lever support (right)       420.351 A         19       Screw M 6x12       P487 U         Spring ring M 6       P498 U         21       Hexagon screw M 6x35       P486 S	05	Rubber clamp	P207 A
Hexagon socket screw M 6x12  P486 Q  Description		Wiring to handle	420.305 A
screw M 6x12       P486 Q         09       Lower joint       420.602         Upper joint       420.601         11       Screw knob       P253         Lower pushbar       420.651         13       Distance piece Ø 22/6,3x22,5       420.370         Stop-nut M 6       P493 K         15       Washer M 8       P496 Q         Adjustment lever       420.356         17       Metal supporting piece       420.999         Lever support (right)       420.351 A         19       Screw M 6x12       P487 U         Spring ring M 6       P498 U         21       Hexagon screw M 6x35       P486 S	07	Washer M 6	P496 L
Upper joint 420.601  11 Screw knob P253 Lower pushbar 420.651  13 Distance piece Ø 22/6,3x22,5 Stop-nut M 6 P493 K  15 Washer M 8 P496 Q Adjustment lever 420.356  17 Metal supporting piece Lever support (right) 420.351 A  19 Screw M 6x12 P487 U Spring ring M 6 P498 U  21 Hexagon screw M 6x35			P486 Q
11       Screw knob       P253         Lower pushbar       420.651         13       Distance piece Ø 22/6,3x22,5       420.370         Stop-nut M 6       P493 K         15       Washer M 8       P496 Q         Adjustment lever       420.356         17       Metal supporting piece       420.999         Lever support (right)       420.351 A         19       Screw M 6x12       P487 U         Spring ring M 6       P498 U         21       Hexagon screw M 6x35       P486 S	09	Lower joint	420.602
Lower pushbar 420.651  13 Distance piece Ø 22/6,3x22,5 420.370 Stop-nut M 6 P493 K  15 Washer M 8 P496 Q Adjustment lever 420.356  17 Metal supporting 420.999 Lever support (right) 420.351 A  19 Screw M 6x12 P487 U Spring ring M 6 P498 U  21 Hexagon screw M 6x35 P486 S		Upper joint	420.601
13       Distance piece Ø 22/6,3x22,5 Stop-nut M 6       420.370         15       Washer M 8       P493 K         15       Washer M 8       P496 Q         Adjustment lever       420.356         17       Metal supporting piece       420.999         Lever support (right)       420.351 A         19       Screw M 6x12       P487 U         Spring ring M 6       P498 U         21       Hexagon screw M 6x35       P486 S	11	Screw knob	P253
22/6,3x22,5 Stop-nut M 6 P493 K  15 Washer M 8 Adjustment lever 420.356  17 Metal supporting piece Lever support (right) 420.999 Lever support (right) 420.351 A  19 Screw M 6x12 Spring ring M 6 P487 U Spring ring M 6 P486 S		Lower pushbar	420.651
15       Washer M 8       P496 Q         Adjustment lever       420.356         17       Metal supporting piece       420.999         Lever support (right)       420.351 A         19       Screw M 6x12       P487 U         Spring ring M 6       P498 U         21       Hexagon screw M 6x35       P486 S	13		420.370
Adjustment lever 420.356  17 Metal supporting 420.999 Lever support (right) 420.351 A  19 Screw M 6x12 P487 U Spring ring M 6 P498 U  21 Hexagon screw M 6x35 P486 S		Stop-nut M 6	P493 K
17	15	Washer M 8	P496 Q
piece Lever support (right) 420.351 A  19 Screw M 6x12 P487 U Spring ring M 6 P498 U  Hexagon screw M 6x35 P486 S		Adjustment lever	420.356
19	17		420.999
Spring ring M 6 P498 U  21 Hexagon screw M 6x35 P486 S		Lever support (right)	420.351 A
21 Hexagon screw M P486 S 6x35	19	Screw M 6x12	P487 U
6x35 P466 S		Spring ring M 6	P498 U
Lever support (left) 420 351	21		P486 S
		Lever support (left)	420.351




#### CM-13 13-Inch Carpet Machine Tank Cover and Fresh Water Tank Parts List and Schematic Drawing

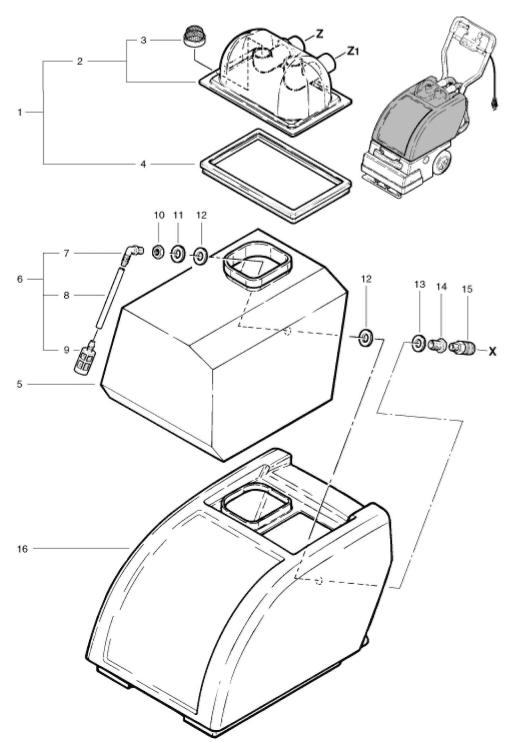

Pos.	Description	Reference
01	Tank cover complete including Items 2-4	530.755
02	Tank cover	400.756
03	Filter	400.766
04	Seal for cover	420.723
05	Fresh water tank	420.722
06	Suction hose complete including Items 7-9	400.725
07	Angled fitting G 1/4"	P541 I
08	Suction hose 8/6 x 100	400.261 B
09	Fresh water filter	P528
10	Hexagon nut G 3/8"	P535 B
11	Washer Ø 35	P098
12	Seal Ø 35	P097 B
13	Gasket Ø 30/17x2	P097
14	Reducer G 3/8'"- 1/4"	P535 A
15	Female quick connector 1/4"	P 500 B
16	Tank	420.721




#### CM-13 13-Inch Carpet Machine Tank and Chassis Cover Parts List and Schematic Drawing

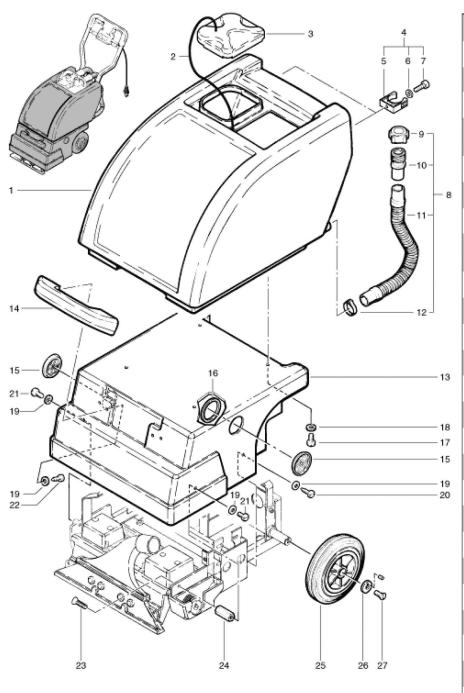

Pos.	Description	Reference
01	Tank	420.721
02	Cordle	490.750
03	Clean water tank cover	530.758
04	Hose support complete including Items 5-7	400.445
05	Hose support	P109 A
06	Washer M 5	P497 G
07	Hexagon socket srew M 5x14	P488 F
08	Discharge hose complete including Items 9-12	480.740
09	Hose socket cap	500.410
10	Hose socket	500.409 A
11	Discharge hose 330 mm	480.741
12	Hose clamp Ø 36,5- 39,6	P553 R
13	Chassis cover	420.711
14	Handle	077.560
15	Handle	P030 L
16	Attaching ring	400.713
17	Pan head screw M 6x12	P475 T
18	Washer M 6	P496 L
19	Washer M 5	P497 G
20	Hose socket cap 4,8x13	P482 L
21	Srew M 6x12	P475 T
22	PT-srew KA 50x18	P516 Q
23	Countersunk screw M 5x10	P480 B
24	Distance piece	420.111
25	Wheel 200x53	500.249
26	Attaching washer Ø 30x3	P499
27	Countersunk screw M 6x12	P487 U




#### CM-13 13-Inch Carpet Machine Pump Assembly and Hoses Parts List and Schematic Drawing

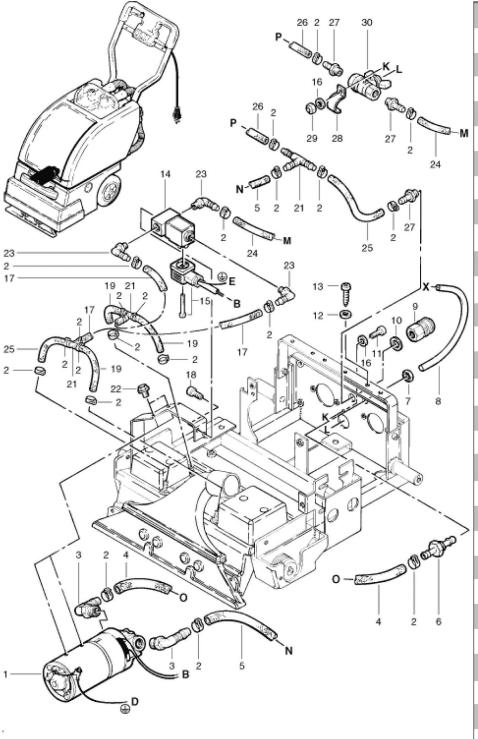

Pos.	Description	Reference
01	Pump	P823
02	Clamp 14,5 mm	P550 A
03	Angled nipple 8-3/8"	P541 M
04	Pressure hose 400 mm	420.261
05	Pressure hose 200 mm	420.269
06	Double fitting	400.342
07	Hexagon nut G 1/8"	P535 I
08	Connection hose	420.725
09	Female quick connector 1/4" IG	P500 A
10	Washer 14/24x2 mm	P260
11	Hexagon socket screw M 5x12	P488 B
12	Washer M 3	P497 B
13	Screw KA 30x10	P516 Z
14	Magnetic valve 3/3 ways	420.276 A
15	Cable for magnetic valve	550.257
16	Washer M 5	P497 E
17	Hose 300 mm	420.261 A
18	Hexagon socket screw M 5x8	P488 E
19	Hose 140 mm	420.341
21	Connection piece TS 8	P544 D
22	Taptite-screw	P484 R
23	Angled nipple 8-1/8"	P541 G
24	Hose 650 mm	420.262 A
25	Hose 110 mm	420.343
26	Hose 250 mm	420.262
27	Male connector NW 8- 1/4" AG	P524 F
28	Bracket	450.336 A
29	Stop nut M 5	P493 G
30	Ball tap	P508 B




#### CM-13 13-Inch Carpet Machine Suction Motor and Hoses Parts List and Schematic Drawing

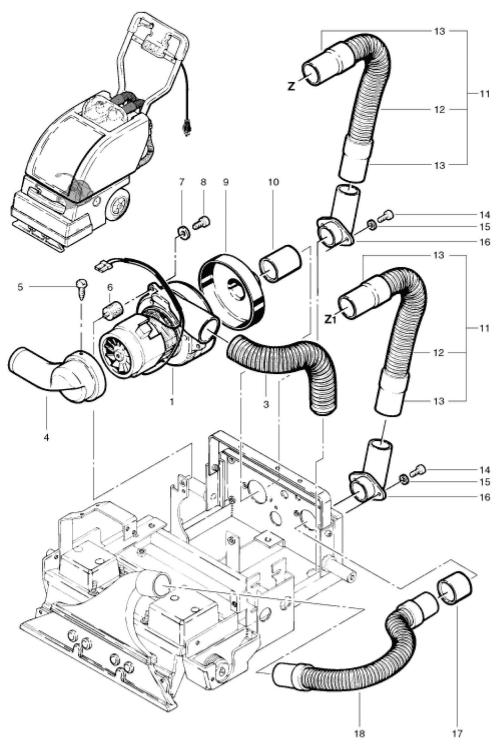

Pos.	Description	Reference
01	Suction motor 120V 60Hz	420.210 A
03	Noise absobing hose	400.227
04	Tube for motor cooling	420.361
05	Screw 2,9x9,5	P483 G
06	Round buffer Ø 20x30 mm	400.214
07	Washer M 6	P496 L
08	Hexagon socket screw M 6x16	P486 V
09	Hose connection cap	500.445
10	Connection piece	420.212
11	Complete hose including Items 12+13	411.770
12	Hose 40/33x310	411.772
13	Socket NW 32	P575 B
14	Hexagon socket screw M 4x12	P486 A
15	Washer M 4	P496 C
16	Connection piece	420.220
17	Socket 45/37,5x47 mm	400.224
18	Suction hose	500.408 A




#### CM-13 13-Inch Carpet Machine Brush Housing and Nozzles Parts List and Schematic Drawing

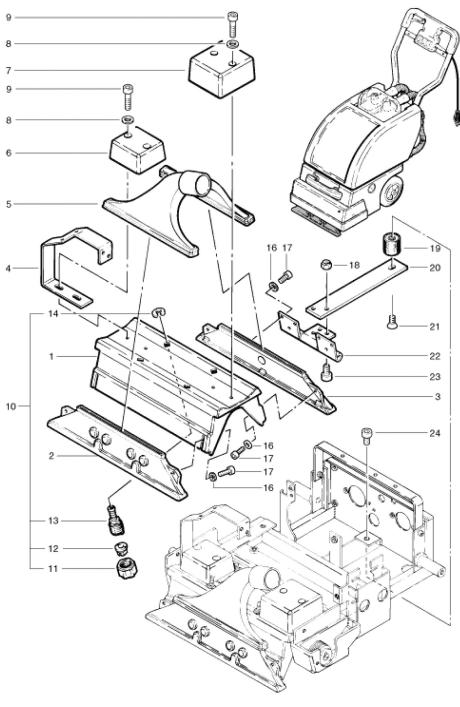

Pos.	Description	Reference
01	Brush canal	420.510
	Suction nozzle (front)	420.520
03	Suction nozzle (rear)	420.530
	Pump holder	420.569
05	Adaptor for suction nozzle	420.560
	Weight (right)	420.567
07	Weight (left)	420.564
	Washer M 6	P496 K
09	Hexagon socket screw M 6x30	P488 S
	Spraying nozzle complete including Items 11-14	420.550
11	Cup nut 3/8"	P602 D
	Spraying jet	P627 B
13	Holder for nozzle	P602 E
	Security washer	P499 N
16	Washer M 5	P497 G
	Hexagon screw M 5x12	P488 B
18	Stopp-nut M 6	P492 K
	Round buffer	420.393
20	Lever	420.392
	Countersunk screw M 8x12	P479 R
22	Hinge	420.391
	Hexagon screw M 6x16	P488 P
24	Hexagon screw M 8x10	P487 A



#### CM-13 13-Inch Carpet Machine Brush Motor and Brush Support Parts List and Schematic Drawing

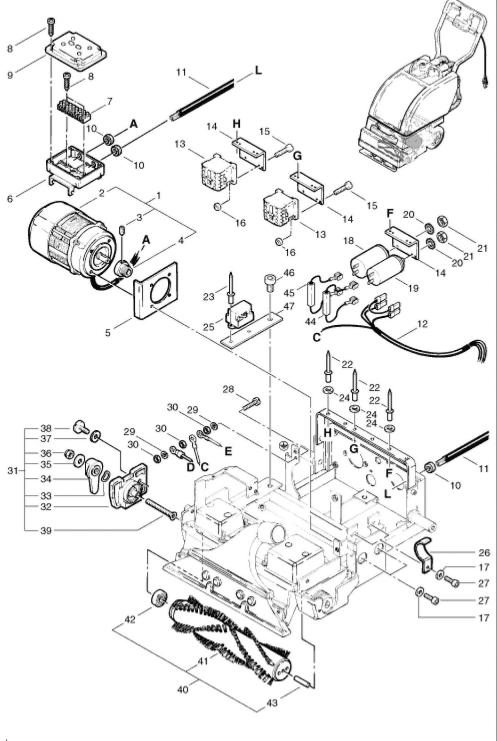

Pos.	Description	Reference
01	Brush motor complete	421.281
	including Items 2-4	
02	Brush motor 370W	400.281 B
03	Threaded pin M 6x10	P484 Y
04	Belt pulley	420.290
05	Motor holder 110x90x3	400.291
06	Distribution box	400.320 A
07	Terminal 9 poles	P383 M
08	PT-Screw KA 30x14	P516 S
09	Cover of distribution box	P379 A
10	Rubber clamp	P408 K
11	Harness for pushbar	420.305 A
12	Harness for capacitor	402.306 A
13	Power protector	P353 A
14	Angle	420.116
15		P477 D
16	Cyl. Head screw M 3x14	P491 P
17	Hexagon nut M 3	
1000000	Washer M 5	P496 G
18	Capacitor 50 μF	P385 F
19	Capacitor 70 μF	P385 G
20	Serrated lock washer M 8	P499 F
21	Hexagon nut M 8	P490 E
22	Blind rivet 3x10	P485 J
23	Blind rivet 4x8	P485 C
24	Washer M 3	P497 J
25	Relais	420.331 A
26	Clamp	400.137
27	Hexagon socket screw M 5x16	P486 I
28	Cyl. Head screw M 4x20	P478 L
29	Spring washer M 4	P498 A
30	Hexagon nut M 4	P491 Q
31	Brush support complete	420.450
•	including: items 32-39	
32	Brush support	420.456
33	Spring washer Ø	P498 X
	14,6x18x0,15	1 100 /
34	Supporting lever	420.461
35	Washer M 6	P496 L
36	Stopp-nut M 6	P492 K
37	Washer M 5	P497 E
38	Special screw M 5x12	400.475
39	Screw m 6x45	P480 J
40	Brush complete (0,35)	420.470
40	including: items 41-43	720.770
41	Standard brush (0,35)	420.471
42	Ball bearing Ø 12/32x10	P316 D
43	Centrepin 8x38 mm	400.478
44	Resistor 8.2 kOhm	421.321
44	Resistor 5.6 kOhm	421.321
46		
	Hexagon socket screw M 8x10	P487 A
47	Clamp	421.118





